

## MAINTENANCE INSTRUCTIONS

Eclipse EC Rubber floor covering is designed to retain its appearance with a minimal amount of maintenance and provide slip resistance and exceptional wear-ability. StaticWorx rubber flooring never needs waxes or coatings. This eliminates the downtimes associated with the waxing/stripping/waxing cycle necessary with many other floor coverings.

### GENERAL PRECAUTIONS

- Do not apply any hard coatings to StaticWorx<sup>®</sup> ESD rubber flooring.
- Never use grit brushes or black, green, or blue pads.
- For regular maintenance, self-contained automatic scrubbing machines may be used for large areas (white pad only.)
- Pick up spills right away, if possible.
- For stairs and small areas, special equipment is available from Lever Industrial.
- Be sure to maintain a good walk-off area in the entrance(s) of your facility. Prevent as much dirt from entering the building as possible. Walk-off mats should be used to wipe dirt and grit from shoes and prevent it from being tracked into the building. The walk-off mats should be cleaned at regular intervals so that they can properly fulfill the task they are intended to do.



### INITIAL CLEANING AFTER INSTALLATION

After finishing interior building construction, floor coverings usually require a thorough cleaning. No sealers are required for StaticWorx ESD rubber tile. Initial cleaning procedures should not be performed within the first 72 hours after installation.

#### Procedure

1. Totally sweep or vacuum area to be cleaned.
2. Apply a diluted pH neutral cleaner such as StaticWorx ScrubWorx to the floor.
3. Let solution act for 5-10 minutes. Important: Do not allow solution to dry.
4. Scrub area with a single disc machine (150-300 rpm) and soft nylon brush or white pad.
5. Remove (wet vacuum) residue.
6. Rinse with clear water and remove.
7. Allow floor to thoroughly dry (1-2 hours).
8. Dry buff floor with single disc rotary buffing machine and soft nylon brush or white pad (not to exceed 300 rpm). Do not heel machine.

## REGULAR MAINTENANCE

Floors subject to heavier traffic will require more frequent interim care than low traffic areas. Regularly monitor the state of your StaticWorx rubber floor to determine how frequently a full cleaning is needed.

### DAILY MAINTENANCE

1. Sweep with a clean broom or brush to remove dust and dirt.
2. To remove light soils, spot clean with a neutral pH cleaner such as ScrubWorx Neutral Cleaner.

### INTERIM MAINTENANCE (1-5 TIMES A WEEK)

1. Sweep with a clean broom or brush to remove dust and dirt.
2. To remove light soils, spot clean with a neutral pH cleaner such as ScrubWorx Neutral Cleaner.

## STAIN REMOVAL

Most stains can be removed with common solvents. To remove dried iodine-based spills such as Betadine, use a cleaner such as Butcher's "Speedball 2000." Scuffs and black heel marks can be easily removed by spot cleaning with a neutral pH cleaner such as ScrubWorx cleaner.

**NOTE: Never use wax strippers or high alkaline liquids on StaticWorx ESD rubber.**

## WAXES/HIGH SHINE

All StaticWorx ESD Rubber Flooring features a built-in dirt repellent, which makes it unnecessary to apply wax coatings to protect the floor. Wax coatings are not recommended for antistatic flooring.

### Questions/Assistance:

For questions/assistance, please contact StaticWorx Customer Service at [info@staticworx.com](mailto:info@staticworx.com) or call (617) 923-2000, Monday-Friday between 8:00 am and 7:00 pm EST.